



Some customers have found that the battery clips in their presenter are not holding the batteries as tight as they should, causing the presenter to not function properly. In order to fix this, you can use a pointed object to gently pry the two tabs inside the battery compartment out, to make the battery fit tighter. The pictures below show how to do this.



If you continue to have problems with your presenter please feel free to contact us at [www.targus.com/support](http://www.targus.com/support) and we will be glad to provide RA information so that we can exchange the unit for you.